

IMPORTANT INFORMATION

Thank you for selecting JELD-WEN products. Attached are JELD-WEN's recommended installation instructions for the impact handle and lock set. Read these instructions thoroughly before beginning.

These instructions supplement the assembly and installation instructions for the patio door. Please use both the attached instructions and this supplement to properly install the patio door.

Note to Installer: Provide a copy of these instructions to the building owner. By installing this product, you acknowledge the terms and conditions of the limited warranty as part of the terms of the sale.

SAFETY

- Wear protective gear (e.g. safety glasses, gloves, ear protection, etc.).
- Operate hand/power tools safely and follow manufacturer's operating instructions.
- Use caution when working at elevated heights.

IF INJURY OCCURS, IMMEDIATELY SEEK MEDICAL ATTENTION!

INCLUDED PARTS & NEEDED TOOLS

INCLUDED PARTS


- A Interior/exterior handles
- B Lock body
- C Face plate
- D Cylinder locks
- E Lock keeper

Items not shown:

- Assembly screws
- Keys

NEEDED TOOLS


- Small flat head screwdriver
- Phillips screwdriver
- Drill with bits and drivers

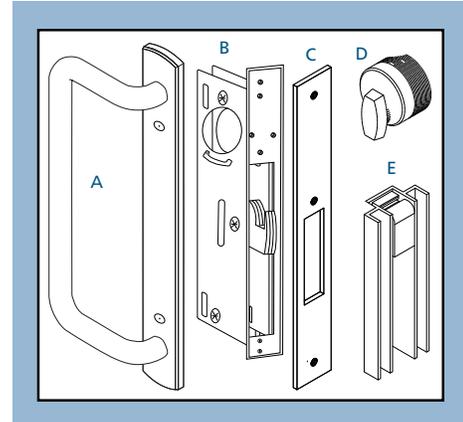

INSTALL HANDLE & LOCK SET

INSTALL HANDLES & CYLINDER LOCKS

1. Install the handles using the two 2 1/4" machine screws. Install the handle with screw holes on the interior.
2. If the lock body has not been installed into the jamb of the operating panel, align the cylinder lock holes with the holes in the panel and secure with two 3/4" screws. Do not fully tighten the lock body screws.
3. Back out the two cylinder lock security screws until they do not block the cylinder lock holes.
4. Slip a lock washer onto each cylinder lock.
5. Position the keyed cylinder lock unit on the exterior side of the door panel, and the turn latch on the interior.
6. Simultaneously screw the cylinder lock units in opposite directions into the holes on both the interior and exterior of the door panel until they are snug with the door panel. Both must be positioned at 6 o'clock so that the security screws will engage the groove in the cylinder locks.
7. Use a small flat head screwdriver to tighten the security screws until they are flush with the face of the lock body.

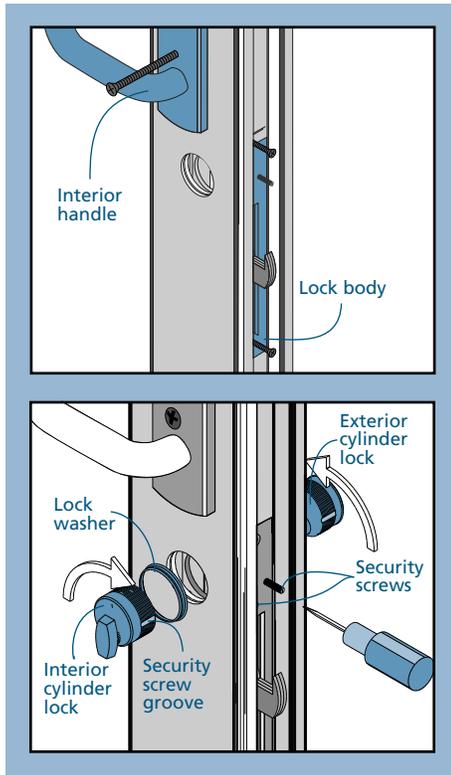

Note! If the security screws are tight but not flush, the cylinder lock units will need to be rotated slightly clockwise or counterclockwise.

8. Test the lock to make sure it functions properly.
9. Tighten the lock body screws.

INSTALL FACE PLATE & KEEPER

1. Install the face plate using a 3/4" screw at the top and bottom and a 1/4" screw in the middle.
2. Extend the lock hook and hang the keeper on the hook with the metal spring flap up and facing the jamb.
3. Close the door and mark the jamb at the top and bottom of the keeper.
4. Position the keeper between the marks and drive a #10 x 3" screw in the center of each elongated adjustment hole.
5. Close the door and test the lock to make sure it engages the keeper properly. Adjust up or down as necessary.
6. Drive screws into the remaining two holes and tighten all screws.

